


Time Optics™ Analog Talking Watch Dual Voices and Alarm (2 Buttons & 1 Crown)

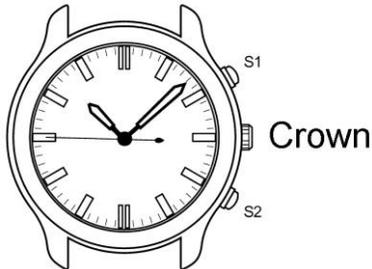

S1 Button is at 2 o'clock (outward)
S2 Button is at 4 o'clock (inward)

Your watch is a *real voice* and hand-synchronizing Analog Talking Watch with both male and female voices and an alarm! The hands of the watch are always synced to the voice announcement of your watch so there is only one easy setup and no question about what time it really is! One press of the button will tell you the time, a second press of the button will tell you the date, and a third press of the button will announce the alarm setting.

NOTE: Never use the Crown to set the time! The watch will require a reset if the Crown is moved.

ANNOUNCEMENTS:

Press S1 to announce the Time. The watch will announce Hour and Minute

Press S1 twice to announce the Day, Month, Date and Year

Press S1 three times to announce Alarm Time and if Alarm is ON or OFF

VOICE SELECTION (Male/Female)

Press and hold the 2 o'clock button (S1) until the new voice announces current Time setting or Date data.

SET TIME

1. Press Recessed button ONCE. Press 2 o'clock button to confirm you want to change the time.
2. Press Recessed button to choose the hour, then 2 o'clock button to confirm the hour.
3. Press Recessed button to choose the minute, then 2 o'clock button to confirm the minute.
4. Press Recessed button to choose AM or PM, then 2 o'clock button to confirm.
5. The time set will be announced and the hands will synch to the time set. NOTE: When the sync is complete, the time will be announced.

SET DATE

1. Press Recessed button TWICE. Press 2 o'clock button to confirm you want to change the date.
2. Press Recessed button to choose the year, then 2 o'clock button to confirm the year.
3. Press Recessed button to choose the month, then 2 o'clock button to confirm the month.
4. Press Recessed button to choose the date, then 2 o'clock button to confirm the date.
5. Press Recessed button to choose the day of week, then 2 o'clock button confirm the day.
6. The date set will be announced.

SET ALARM

1. Press Recessed button THREE times. Press 2 o'clock button to confirm you want to change the alarm time.
2. Press Recessed button to choose the hour, then 2 o'clock button to confirm the hour.
3. Press Recessed button to choose the minute, then 2 o'clock button to confirm the minute.

4. Press Recessed button to choose AM or PM, then 2 o'clock button to confirm.
5. The Alarm Time set will be announced.

ALARM ON/OFF

1. Press Recessed button FOUR times. Press 2 o'clock button to confirm you want to change the Alarm status.
2. Press Recessed button to change Alarm status, then 2 o'clock button to confirm.
3. The watch will announce if the Alarm is on or off.

TROUBLESHOOTING:

Watch is running one step every 2 seconds

When battery level is low the watch runs one step every 2 seconds. Replace a new battery.

Time announcement is different from the analog time of the watch

You need to synchronize hands to match with the time announcement. Go to "Synchronize Hands to match time announcement" for details.

Synchronize Hands to Match Time Announcement

1. Pull out the crown of the watch when the Second hand runs to 12 o'clock. The second hand will stop at 12 o'clock. If you miss the 12 o'clock, you need to wait for the next chance.
2. Turn the crown of the watch to set Hour and Minute hands pointing at 12 o'clock
3. Now Hour, Minute and Second hands are all pointing at 12 o'clock with the Crown pulled out
4. Press and hold S1 (2 o'clock button) for more than 5 seconds with the crown pulled out.
5. After five seconds, push in the Crown (while still pressing S1). NOTE: Pressing S1 and pushing in the Crown should be simultaneous.
6. The watch hands will begin to spin to match the time previously announced.
7. Please wait until the watch resume normal running.
8. After the watch resumes normal running, check to see if the time announcement and watch hands are synchronized by pressing S1 (2 o'clock button) once. If they are synchronized, you have successfully reset the watch. If not, repeat Step 1 to 8.

BATTERY CHANGE

There is only one CR2025 type battery inside the watch. This battery is used to drive both the voice announcement as well as the gearbox.

When you need to change a new battery it is better to have the battery changed by a trained jeweller or watch specialists. Their training may avoid damage to the watch.

1. Open the watch at the back. Carefully remove the bottom, make sure you do not lose the waterproof seal.
2. Pick up the battery spring on the right.
3. Remove the battery and insert replacement battery (watch the polarity "+" up).
4. Push the battery spring down.

Before you put the back on again, make sure the waterproof seal is correctly in place.

NOTE: After a new battery is replaced, you need to set the time of your watch.

1. Set Time and Calendar according to "Set Time" and "Set Calendar" as mentioned in this instruction manual.
2. Synchronize hands to match the Talking Time that you have been set by following steps from the "Synchronize Hands to Match Time Announcement".

LIFETIME LIMITED WARRANTY

This watch or electronic quartz watch module from the distributor is warranted to the original recipient for the lifetime of the timepiece from the original purchase date under normal use and service against defective materials or workmanship.

This warranty is void if the watch has been damaged by accident or unreasonable use, neglect, improper service or other causes not arising out of defects in material or workmanship.

During the lifetime of the timepiece, the service center will repair, adjust and/or replace (at their option) defective parts without charge to the recipient when watch is returned prepaid postage and insured. Do not send watch box as it will not be returned.

This warranty does not apply to case, crystal, attachments, or battery cells. Should you need servicing, please send an email to [Returns@TimeOptics.com](mailto>Returns@TimeOptics.com) for shipping instructions.